

EZ9Plus & EZ11Plus User Self Help:

"Door will not open"













Problem:
The power is turned off.
(When the power is off the door will lock)

What to do: Turn power on















Problem: Sleep mode is active and the screen saver is displayed

(In the sleep mode the door will be locked)

What to do: Awaken the unit from the sleep mode by pressing the START/STOP key.















Problem:

There is water in the chamber and the water in the chamber icon is displayed

What to do:

Start a new cycle. At the end of the new cycle water will be returned to the reservoir













Problem:

The machine has not returned to normal pressure

What to do:
Wait for the machine to return to normal pressure.














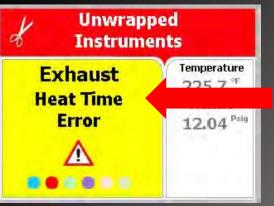

Problem: An error message is displayed



What to do:
Press the START/STOP key to clear
the error message and unlock
the door

If the problem persists call your dealer or Tuttnauer USA for service.









